



COSMIQ Nova Series

Android Laptop

1. Unbox and Boot

Step 1

Carefully remove the Android laptop box from the outer packaging. Then, slide off the protective sleeve and gently lift the lid of the box to begin setting up your device.

Step 2

Press & hold Power (2-3 secs) until the COSMIQ logo appears.

Step 3

Follow onscreen prompts and wait for 10 secs for the COSMIQ OS to load.

2. Shut Down

Step 1


Press and hold Power button for 2-3 sec to open the menu.

Step 2

To shut down your Android laptop safely, click on the Power Off option from the menu. When prompted, select or click OK to confirm the shutdown.

P.S.

Save your work before powering down.

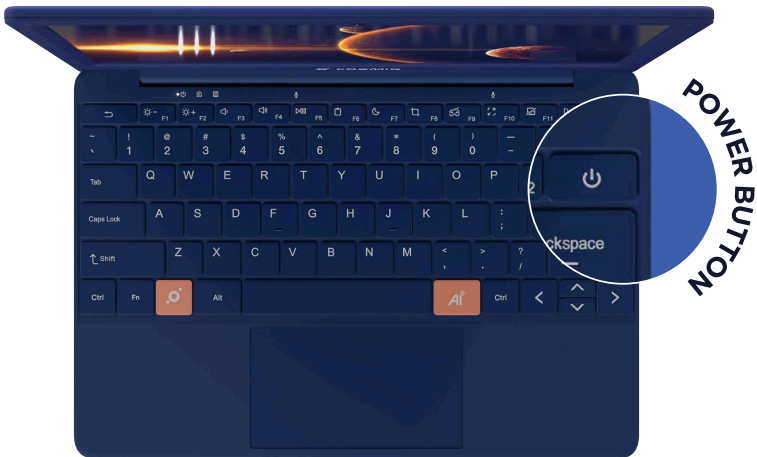

3. Recovery Mode

Step 1

Power off your COSMIQ fully.

Step 2

Press & hold Power button during boot to enter Recovery mode.

Factory Reset

If you want to restore the Android laptop to its original factory settings, select 'Wipe Data/Factory Reset' from the recovery menu. This will erase all personal data and return the system to its default state.

4. Sleep Mode

To Sleep

Press the Power button once to dim the display.

To Wake Up

Press again to wake up exactly where you left off.

5. Hard Reboot

Step 1

If the system freezes, press & hold Power for 10 sec until it turns off.

Step 2

Release to trigger an automatic restart.



6. Touchpad Gestures


Step 1

Swipe up with three fingers to open start menu




Step 2

Pinch to zoom in or out.

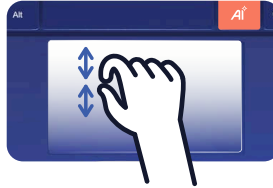

Step 3

Swipe left & right with three fingers to switch apps.

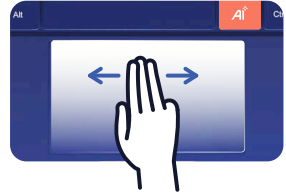

7. Keyboard Shortcuts

Open App Drawer



Show Desktop



Notifications



Quick Settings



File Manager



Clipboard History



Maximise App



Show Keyboard Shortcuts



Minimise App



Close App



8. Update COSMIQ OS

Step 1


Open  Updater from the App Drawer.

Step 2

Click Refresh to check for OS and firmware updates.

Step 3

If a system update is available, click Install to begin the update process. Once the installation is complete, reboot the Android laptop if prompted.

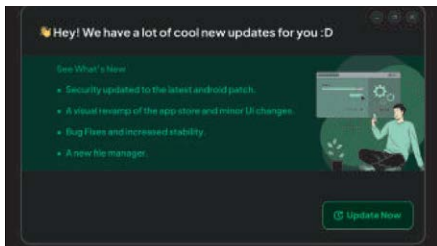

9. Keymapping

Step 1

Press F9 button to open Keymapping UI.

Step 2

Drag & drop buttons and tap to assign keys or clicks.

Step 3

Close UI to auto-save your custom layout.



 COSMIQ NOVA
SERIES LAPTOP





COSMIQ Edusnap Private Limited

 +91- 97117 97117

 contact@cosmiq.co.in

 services@cosmiq.co.in